



# A/T Clutch Pressure Control Solenoid Valve B and C Replacement

1. Remove the air cleaner assembly (see page 11-306).
2. Disconnect the connectors from A/T clutch pressure control solenoid valves B and C.

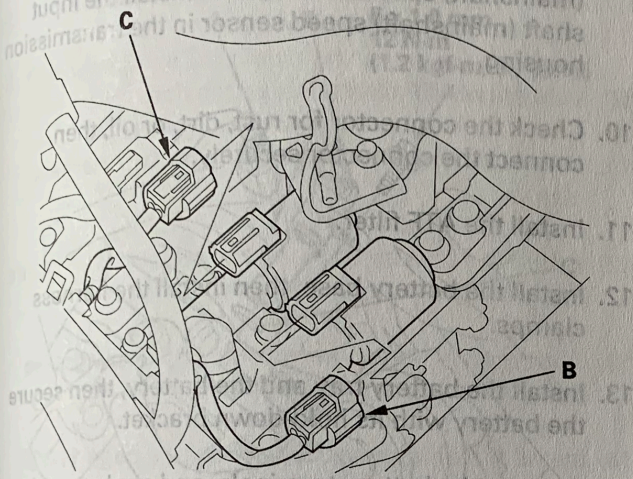

3. Remove the breather tube from the radiator upper hose bracket, then remove the radiator upper hose bracket (A) and A/T clutch pressure control solenoid valves B and C.

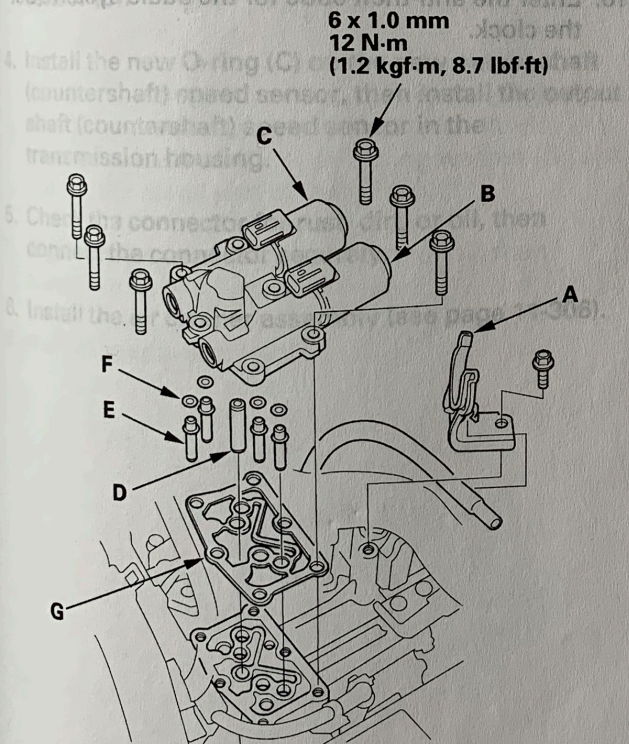

4. Remove the ATF pipe (D), the ATF joint pipes (E), the O-rings (F), and the gasket (G).
5. Clean the mounting surface and the fluid passages of the A/T clutch pressure control solenoid valves B and C and the transmission housing.
6. Install the new gasket with blue side down; white side up on the transmission housing.
7. Install the ATF pipe and the ATF joint pipes, and install the new O-rings over the ATF joint pipes.
8. Install the A/T clutch pressure control solenoid valves B and C, radiator upper hose bracket, and the breather tube.
9. Check the A/T clutch pressure control solenoid valve B and C connectors for rust, dirt, or oil, then connect the connectors securely.
10. Install the air cleaner assembly (see page 11-306).

