


## Tailgate Latch Switch Test

- Open the tailgate.
- Remove the tailgate lower trim.
- Disconnect the 2P connector (A) from the tailgate latch switch (B).

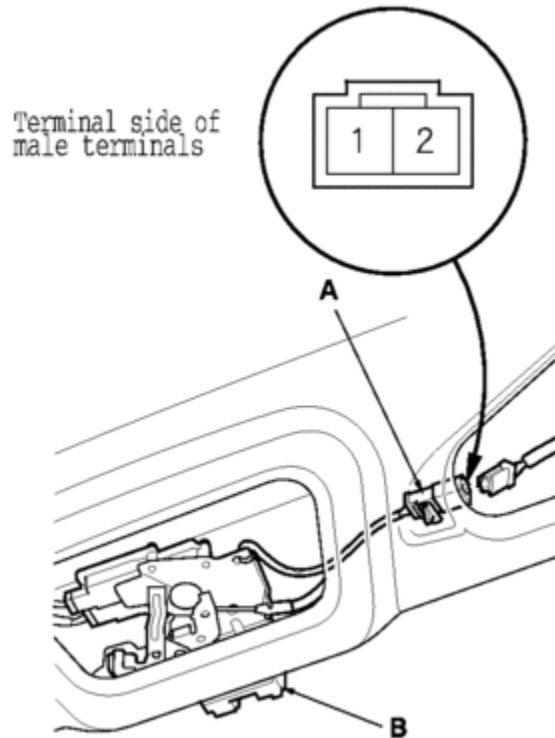

[Click to Enlarge](#)

- Check for continuity between the No. 1 and No. 2 terminals.
  - There should be continuity with the tailgate open.
  - There should be no continuity with the tailgate closed.

## Tailgate Lock Actuator Test

NOTE


Applicable vehicles:

- 2007-08 Honda FIT

### Tailgate Lock Actuator Test

- Open the tailgate.

- Remove the tailgate trim panel.
- Disconnect the 2P connector (A) from the tailgate lock actuator (B).

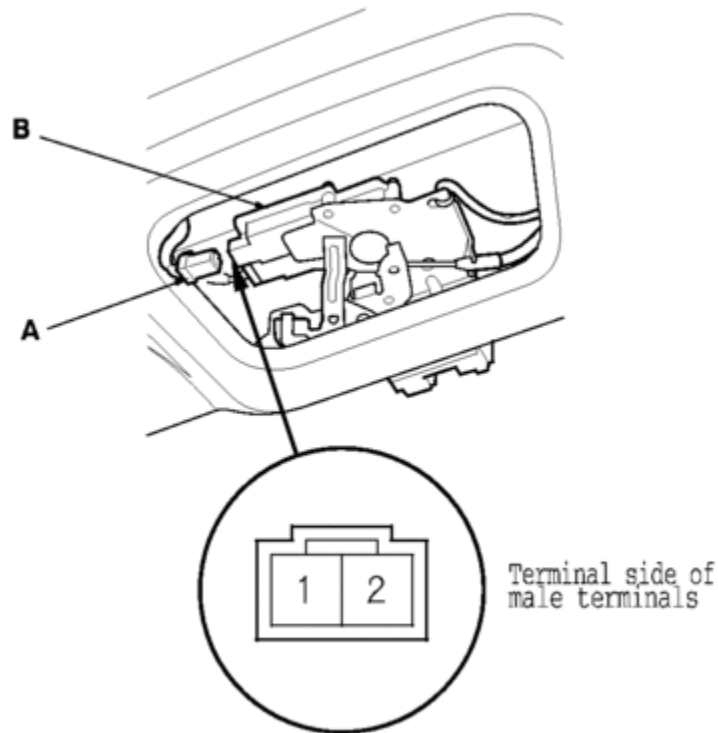

- Check actuator operation by connecting power and ground according to the table. To prevent damage to the actuator, apply battery voltage only momentarily.

Terminal Position	1	2
LOCK	⊕	⊖
UNLOCK	⊖	⊕

- If the actuator does not operate as specified, replace it.

Added by Dr J: you may use 9 volt Duracell battery for this test.