

Steering Angle Sensor Removal and Installation

NOTE

Applicable vehicles:

- 2015-16 Honda FIT


Steering Angle Sensor Removal and Installation

[U//app-na.readspeaker.com/cgi-bin/rsent?customerid=7827&lang=en_us&readid=dvRSContent&url=www.chiltonlibrary.com%2FRepair%2FReadArticleContent%2FmwellwNGLxjkOwNmuIT503i538kKmH7005p_jh1xq94N01%7c154954%7c39497](http://app-na.readspeaker.com/cgi-bin/rsent?customerid=7827&lang=en_us&readid=dvRSContent&url=www.chiltonlibrary.com%2FRepair%2FReadArticleContent%2FmwellwNGLxjkOwNmuIT503i538kKmH7005p_jh1xq94N01%7c154954%7c39497)


Removal/Installation

NOTE: SRS components are located in this area. Review the SRS component locations, and the precautions and procedures before doing repairs or service.

1. Steering Wheel - Remove
2. Column Cover - Remove
3. Cable Reel/Steering Angle Sensor - Remove

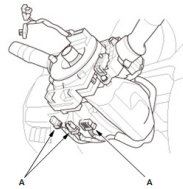


1. Disconnect the connectors (A).

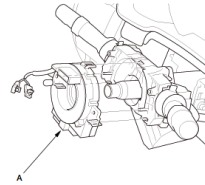

2. Remove the cable reel/steering angle sensor (A).

4. Steering Angle Sensor - Remove

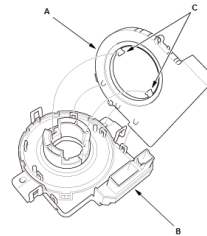

1. Remove the steering angle sensor (A) from the cable reel (B).

NOTE: During installation, position the two tabs (C) of the steering angle sensor as shown.

5. All Removed Parts - Install

1. Install all removed parts in the reverse order of removal.

6. VSA Sensor Neutral Position - Memorize