



**STEP 1**

To set up the 6-point poster:

- Move the board 17.75 in (+/- 5.75 in) from the outside rear tire and 63 in (+/- 5.75 in) back from the center of the tire.
- Adjust the sign 5.75 in (+/- 2 in) above the ground.

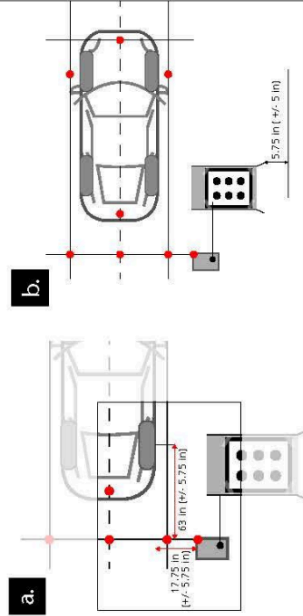


**STEP 5**

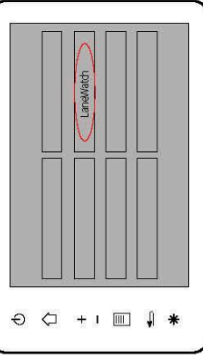


Select "LaneWatch"

**STEP 2**

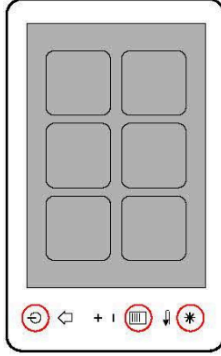


Hold the brightness, power (audio), and menu button simultaneously for 3-5 seconds to access the aiming menu

**STEP 6**

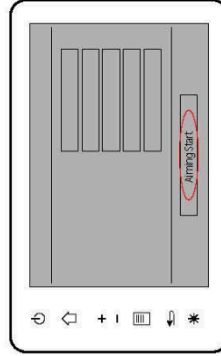


Select "Aiming Start" to access the camera

**STEP 3**

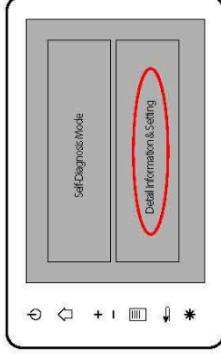


When the hidden menus display on the audio screen, select "Detail Information & Setting"

**STEP 7**

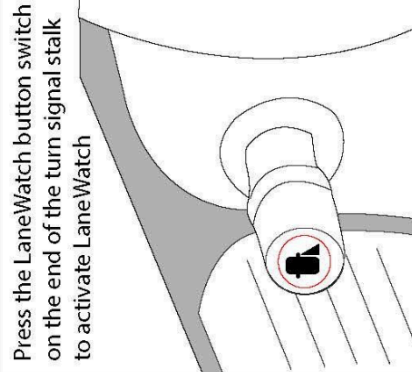

Press the LaneWatch button switch on the end of the turn signal stalk to activate LaneWatch

**STEP 4**

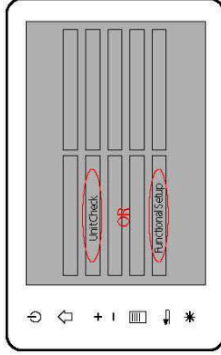

Select "Unit Check" or "Functional Setup"

If "While Aiming IG-OFF is OK" appears on the display audio screen, the aiming process was successful. Press "ok" on the audio screen display and hit "back" to main menu". The aiming process is now complete.

If "Aiming Failed" appears on the display audio screen, repeat the aiming process or adjust the 6-point poster.

Note: The three distance estimator lines depend on your 6-point poster's location. Light will also affect the result of the aiming.