



Your Current Vehicle: 2015 Honda Fit

Rate this article: ★ ★ ★ ★ ★

# Engine Assembly Torque Rod Removal and Installation

NOTE

Applicable vehicles:


- 2015-16 Honda FIT

Engine Assembly Torque Rod Removal and  
Installation


## Removal

1. Engine Undercover - Remove
2. Engine - Support
  1. Support the engine with a transmission jack and a wood block under the oil pan.
3. Torque Rod Mounting Bolt - Remove

MT

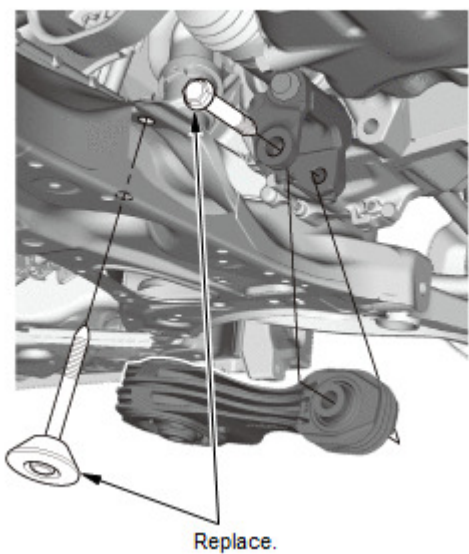

CVT

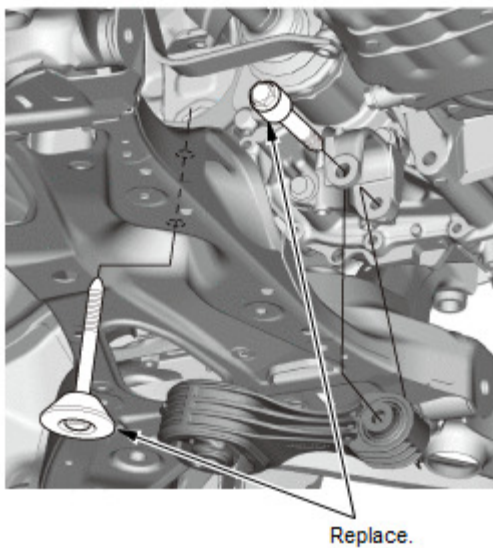


This illustration shows with 16 inch wheel.

### Installation


1. Torque Rod Mounting Bolt - Loosely Install

M/T

Feedback

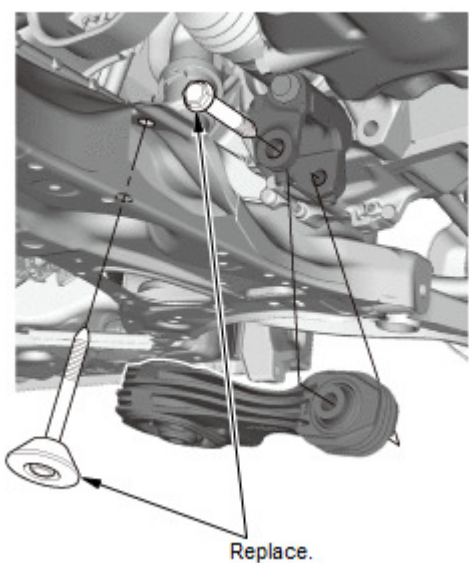

CVT

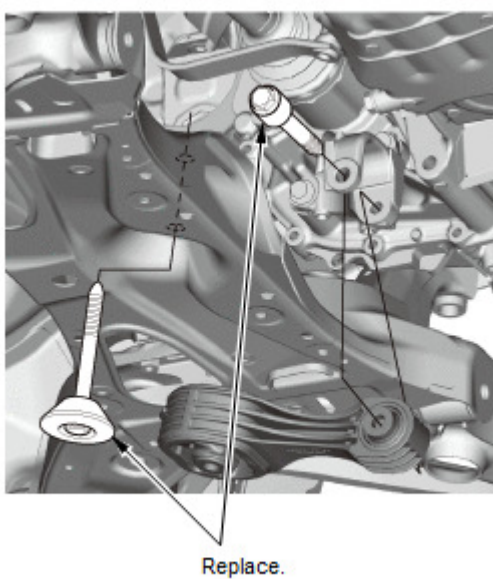


This illustration shows with 16 inch wheel.


1. Loosely install the new torque rod mounting bolts.
2. Transmission Jack and Wood Block - Remove
3. Torque Rod Mounting Bolt - Tighten

M/T

Feedback

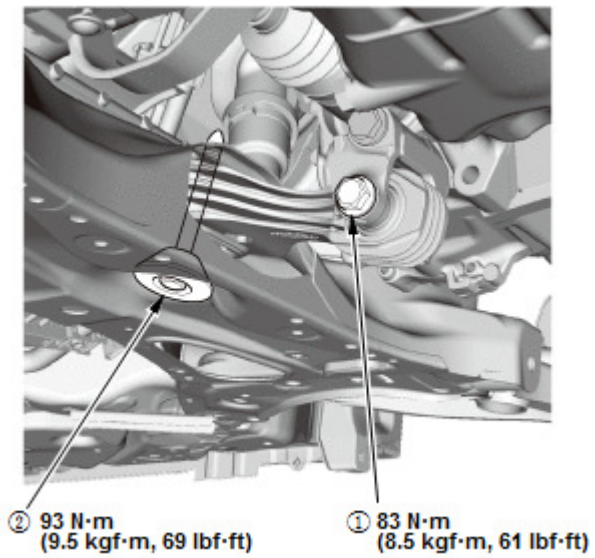

## CVT

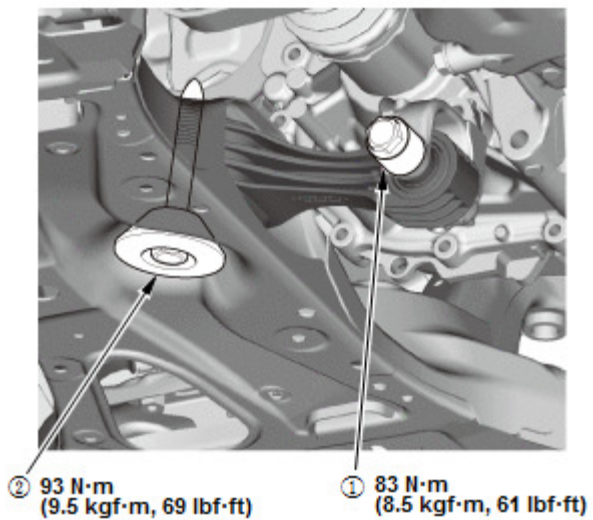

This illustration shows with 16 inch wheel.

1. Tighten the torque rod mounting bolts in the numbered sequence shown.

## 4. Engine Undercover - Install

Copyright ©2018 by Chilton, an imprint of Cengage Learning

(/lh/Home/Index/mwellX3nEXRTugCE1ibrwSD1tCdH48bQc3ULi24ky3QxkxaQ1)Home

Terms and Conditions ([http://www.cengage.com/content/footer/terms\\_of\\_use.aspx](http://www.cengage.com/content/footer/terms_of_use.aspx))

Privacy Statement ([http://www.cengage.com/content/footer/privacy\\_statement.aspx](http://www.cengage.com/content/footer/privacy_statement.aspx))

Contact Us (<http://www.cengage.com/contact/>)

