


PGM-FI System

DTC Troubleshooting (cont'd)

17. Connect A/F sensor (Sensor 1) 4P connector terminal No. 3 to body ground with a jumper wire.


A/F SENSOR (SENSOR 1) 4P CONNECTOR

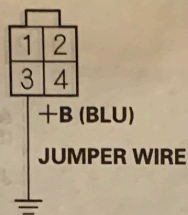

Wire side of female terminals

18. Check for continuity between A/F sensor relay 4P connector terminal No. 2 and body ground.

A/F SENSOR RELAY 4P CONNECTOR

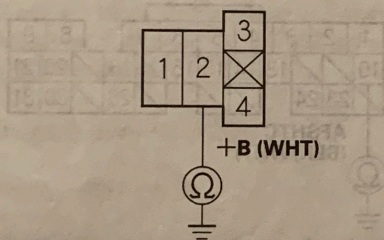

Terminal side of female terminals

Is there continuity?

YES—Go to step 19.

NO—Repair open in the wire between the A/F sensor (Sensor 1) and the A/F sensor relay, then go to step 33.

19. Disconnect ECM/PCM connector E (31P).


20. Check for continuity between ECM/PCM connector terminal E8 and A/F sensor relay 4P connector terminal No. 3.

ECM/PCM CONNECTOR E (31P)



Wire side of female terminals

A/F SENSOR RELAY 4P CONNECTOR

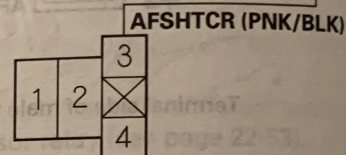

Terminal side of female terminals


Is there continuity?

YES—Go to step 21.

NO—Repair open in the wire between the ECM/PCM (E8) and the A/F sensor relay, then go to step 33.

21. Measure voltage between A/F sensor relay 4P connector terminal No. 1 and body ground.

A/F SENSOR RELAY 4P CONNECTOR

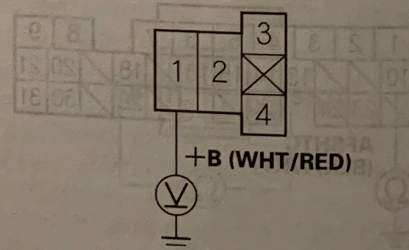

Terminal side of female terminals

Is there battery voltage?

YES—Go to step 22.

NO—Repair open in the wire between the A/F sensor relay and the No. 23 LAF (10 A) fuse or the No. 9 SMALL LIGHT (30 A) fuse, then go to step 33.