


- 22. Turn the ignition switch ON (II).
- 23. Measure voltage between A/F sensor relay 4P connector terminal No. 4 and body ground.

**A/F SENSOR RELAY 4P CONNECTOR**

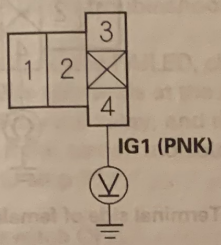


Terminal side of female terminals

Is there battery voltage?

**YES**—Go to step 39.

**NO**—Repair open in the wire between the A/F sensor relay and the No. 31 LAF (7.5 A) fuse, then go to step 33.


- 24. Remove the A/F sensor relay (A).

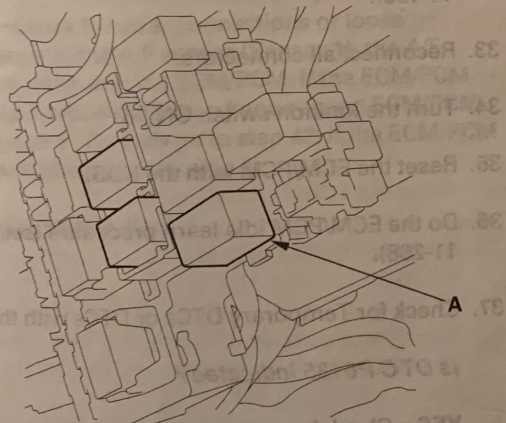

- 25. Disconnect the A/F sensor (Sensor 1) 4P connector.
- 26. Disconnect the EVAP canister vent shut valve 2P connector.

- 27. Check for continuity between A/F sensor (Sensor 1) 4P connector terminal No. 3 and body ground.

**A/F SENSOR (SENSOR 1) 4P CONNECTOR**

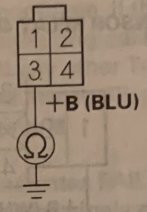

Wire side of female terminals

Is there continuity?

**YES**—Repair short in the wire between the A/F sensor (Sensor 1), the A/F sensor relay, and the EVAP canister vent shut valve. Also replace the No. 23 LAF (10 A) fuse, then go to step 33.

**NO**—Go to step 28.

Take Note!

CLUTCH

(cont'd)